leage	Content		Replace engine oil and oil filter
	Replace engine oil and oil filter	55000	Rotate tires
5000	Rotate tires	33000	Road test vehicle
	Road test vehicle		Inspection #1 ²
	Inspection #1 ²		
	,		Replace engine oil and oil filter
10000	Replace engine oil and oil filter		Replace brake fluid
	Rotate tires		Replace engine air filter
	Road test vehicle		Replace air conditioner filter
	Inspection #1 ²		Rotate tires
		60000	Road test vehicle
15000	Replace air conditioner filter	60000	Inspection #1, #2, #3
	Replace engine oil and oil filter		Inspect engine valves clearance (audible)
	Re-Torque drive shaft flange bolts		Inspect drive belts
	Rotate tires		Replace differential ổil
			Replace transfer case ôil
	Inspect rear differential oil		Replace transmission fluid
	Inspection #1, #2		
	Replace differential ốil		Replace engine oil and oil filter
	Replace transfer case ôil		Detete tires
	Ineplace transfer case off	65000	
20000	Denless engine sit and attender		Road test vehicle
	Replace engine oil and oil filter		Inspection #1 ²
	Rotate tires		ID 1
	Road test vehicle		Replace engine oil and oil filter
	Inspection #1 ²	70000	Rotate tires
	,		Road test vehicle
25000	Replace engine oil and oil filter		Inspection #1 ²
	Rotate tires		
	Road test vehicle		Replace engine oil and oil filter
	Inspection #1 ²		Replace air conditioner filter
			Re- Torque drive shaft flange bolts
30000	Replace air conditioner filter		Rotate tires
	Replace brake fluid	75000	Road test vehicle
	Replace engine air filter		Inspect rear differential oil
	Replace engine oil and oil filter		Inspection #1, #2
	Rotate tires		Replace differential ổil
	Road test vehicle		Replace transfer case ổil
			Replace transfer case on
	Inspection #1, #2, & #3		Danlara annina all and all 614-a
	Inspect transmission fluid		Replace engine oil and oil filter
	Replace differential ôil	80000	Rotate tires
	Replace transfer case őil		Road test vehicle
	I		Inspection #1 ²
	Replace engine oil and oil filter	_	
35000	Rotate tires		Replace engine oil and oil filter
	Road test vehicle	85000	Rotate tires
	Inspection #1 ²	65000	Road test vehicle
			Inspection #1 ²
	Replace engine oil and oil filter		
40000	Rotate tires		Replace air conditioner filter
	Road test vehicle		Replace brake fluid
	Inspection #1 ²		Replace engine air filter
	Improvion #1		Replace engine coolant
45000	Replace air conditioner filter		Replace engine coolant Replace engine oil and oil filter
	Replace and conditioner filter Replace engine oil and oil filter		
		90000	Replace timing belt
	Rotate tires		Rotate tires
	Road test vehicle		Road test vehicle
	Inspect rear differential oil		Inspection #1, #2, #3
	Inspection #1, #2		Inspect transmission fluid
	Replace differential dil		Replace differential ôil
	Replace transfer case ôil		Replace transfer case ôil
50000	Replace engine oil and oil filter		Replace engine oil and oil filter
	Rotate tires	05000	Rotate tires
	Road test vehicle	95000	Road test vehicle
	Inspection #1 ²		Inspection #1 ²

Inspection #1

Ball joints and dust covers

Brake linings/drums and brake pads/discs

Drive shaft boots Engine air filter

Nuts & Bolts on Chassis and body Steering linkage and boots

Inspection #2

Body

Brake lines and hoses

Exhaust pipes and mountings Rack and pinion assembly Engine Coolant

100000 Replace engine oil and oil filter
Rotate tires
Road test vehicle
Inspection #12

Inspection #3

Fuel lines and connections, fuel tank band and

fuel tank vapor vent system hoses

Fuel tank cap gasket

Transmission, transfer case and differential oil

¹ Reset "Maint Reqd" light after replacing engine oil

Required only if vehicle is operated primarily on dusty roads or towing a trailer or using a camper or car-top carrier